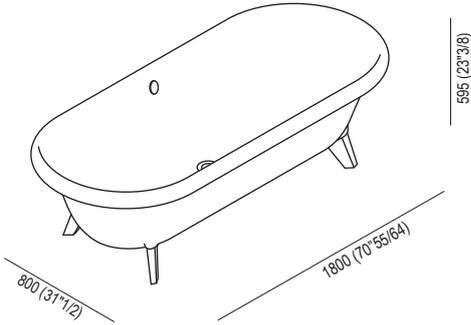


|   |  |
|---|--|
|  | Vasca / Bathtub  |
|   | <b>OTTOCENTO</b>   |
|   | <b>AVAS0969Z</b><br><br>Vasca in Cristalplant®biobased<br><br>Bathtub in Cristalplant®biobased |

#### MANUTENZIONE

Leggere attentamente le istruzioni di manutenzione del Cristalplant® allegate alla vasca.

Per la normale pulizia si consiglia di utilizzare detersivi di uso comune. Si sconsiglia l'utilizzo di detersivi abrasivi, acidi e anticalcare.

#### Nota

La vasca deve essere installata su un pavimento perfettamente in piano e non può essere incassata. Predisporre l'impianto di scarico a pavimento con tubo terminale diametro 40 mm con guarnizione di tenuta.

Le vasche devono essere posate su pavimentazione rigide. Sono a cura dell'installatore la movimentazione in sicurezza, le verifiche strutturali, la portata dei solai e la costruzione del rivestimento.



Non trascinare mai la vasca sul pavimento.

#### MAINTENANCE

Carefully read the Cristalplant® maintenance instructions attached to the Bathtub

For normal cleaning use common detergents. Do not use either abrasive detergents or solvents, acids and anti limestone.

#### Note

The bathtub must be positioned on a flat floor surface and cannot be built-in. Prepare the sewage mains in the floor, ending with a 40 mm diameter pipe with a sealed gasket.

The bathhub must be set up on hard flooring. Handling in safety, structural tests and tests of the load-bearing capacity of the floor are the responsibility of the installer, also the construction of the covering.



Never drag the bathtub across the floor.

#### Agape srl


via A. Pitentino, 6 46037 Governolo  
Roncoferraro (MN), Italy

T +39 0376 250311 / F +39 0376 250330

e-mail: [info@agapedesign.it](mailto:info@agapedesign.it)

[www.agapedesign.it](http://www.agapedesign.it)


CONTENUTO DELLA CONFEZIONE  
PACKAGE CONTENTS

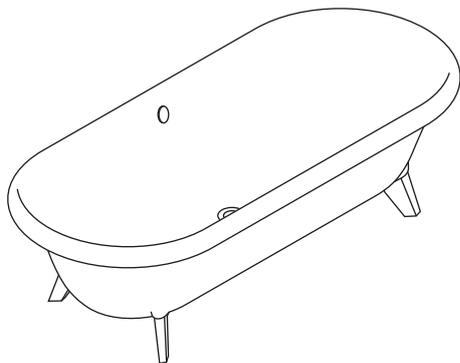


STRUMENTI  
TOOLS




trasparente - antimuffa  
transparent - antimould

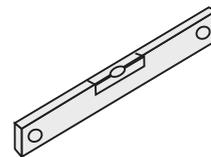

PREDISPOSIZIONE  
WASHBASIN PREDISPOSITION

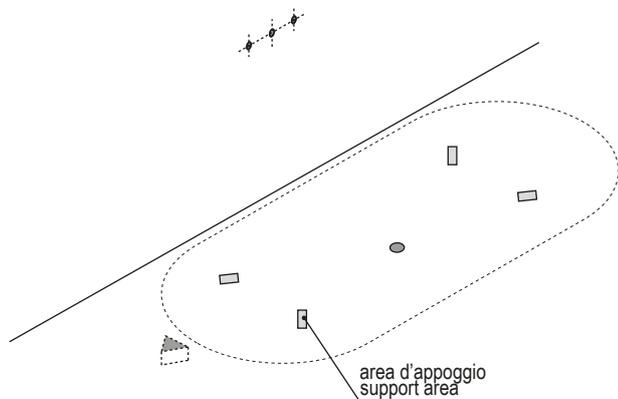


VASCA INSTALLATA  
BATHTUB MOUNTED

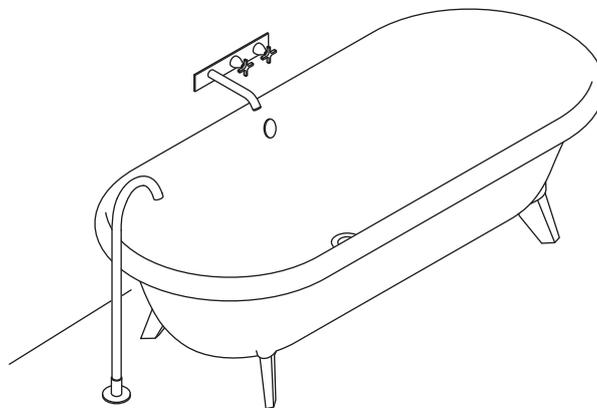

1

INSTALLAZIONE / INSTALLATION


Posizionare i distanziatori in legno sotto alla vasca  
Position the wooden spacers placed under the bathtub

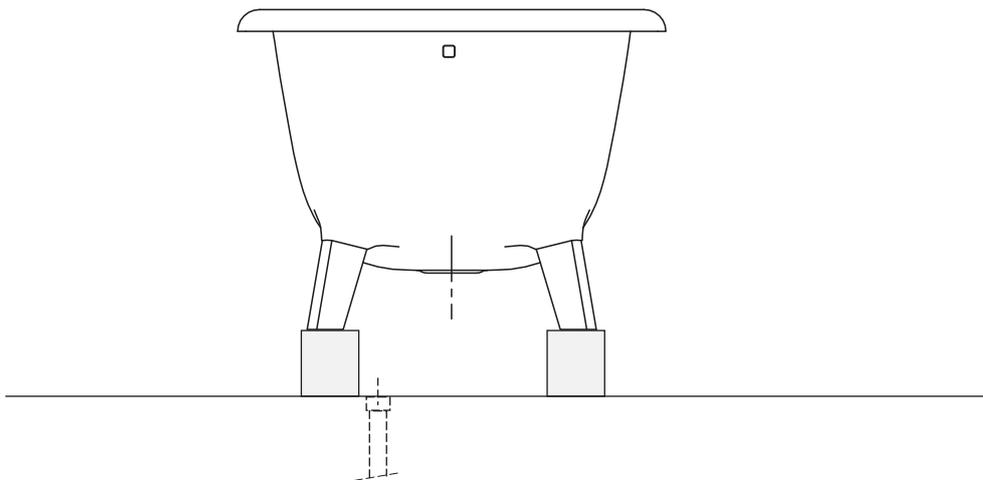

2


PARTICOLARE PILETTA / WASTE DETAIL

Consultare le istruzioni dedicate allo scarico  
Examine the instruction dedicated of the waste

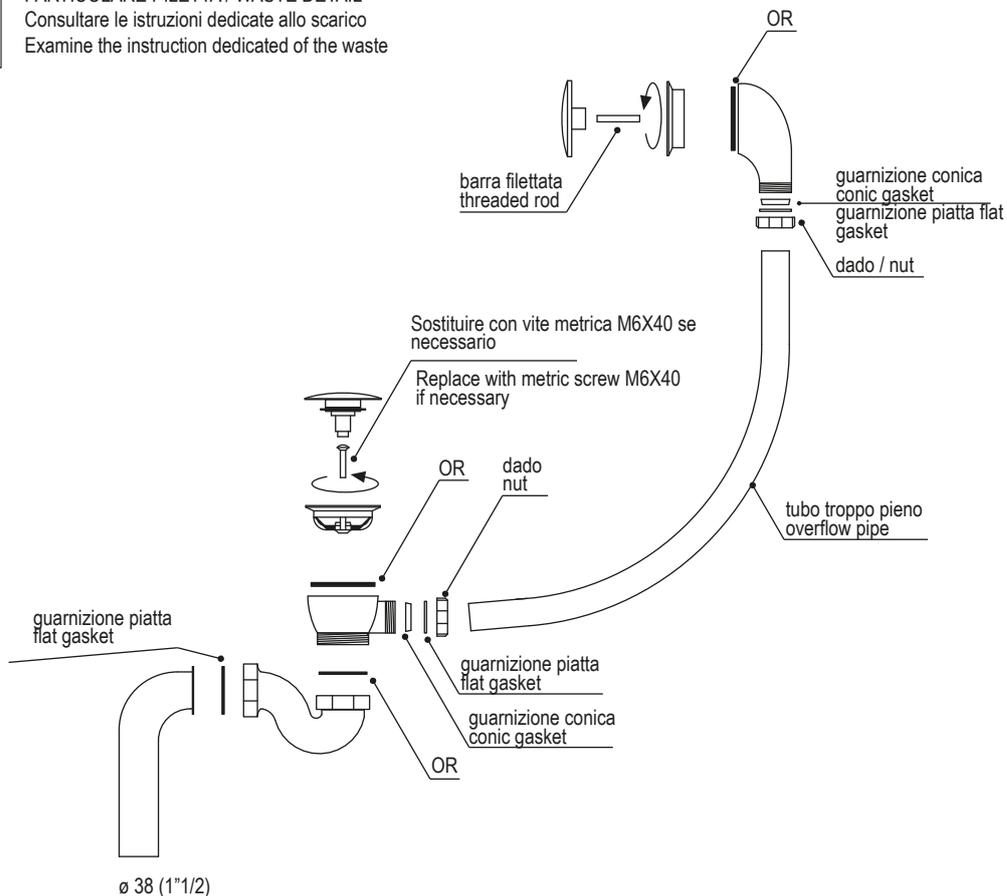

3


Togliere i distanziatori in legno.  
Remove the wooden spacers.

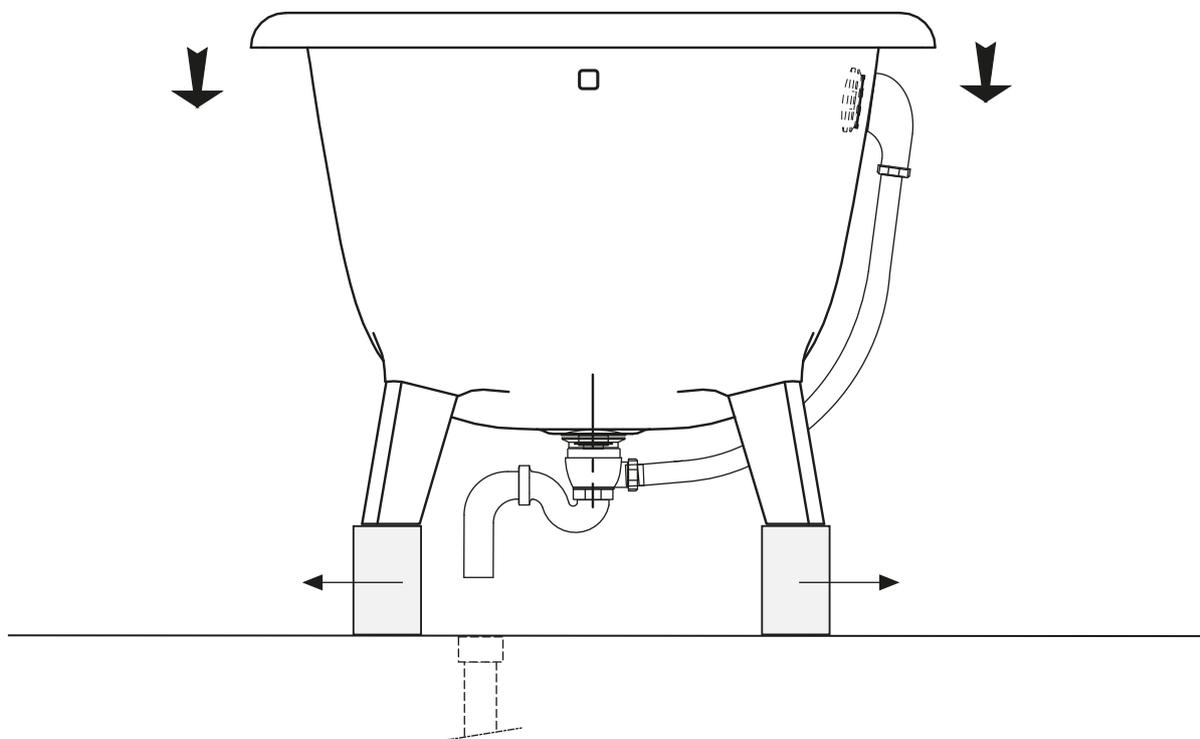

4




Collegare alla rete di scarico  
Effettuare alcune prove di tenuta dell'impianto realizzato  
Connection to the main drain  
Test different times the seal of the realised plant

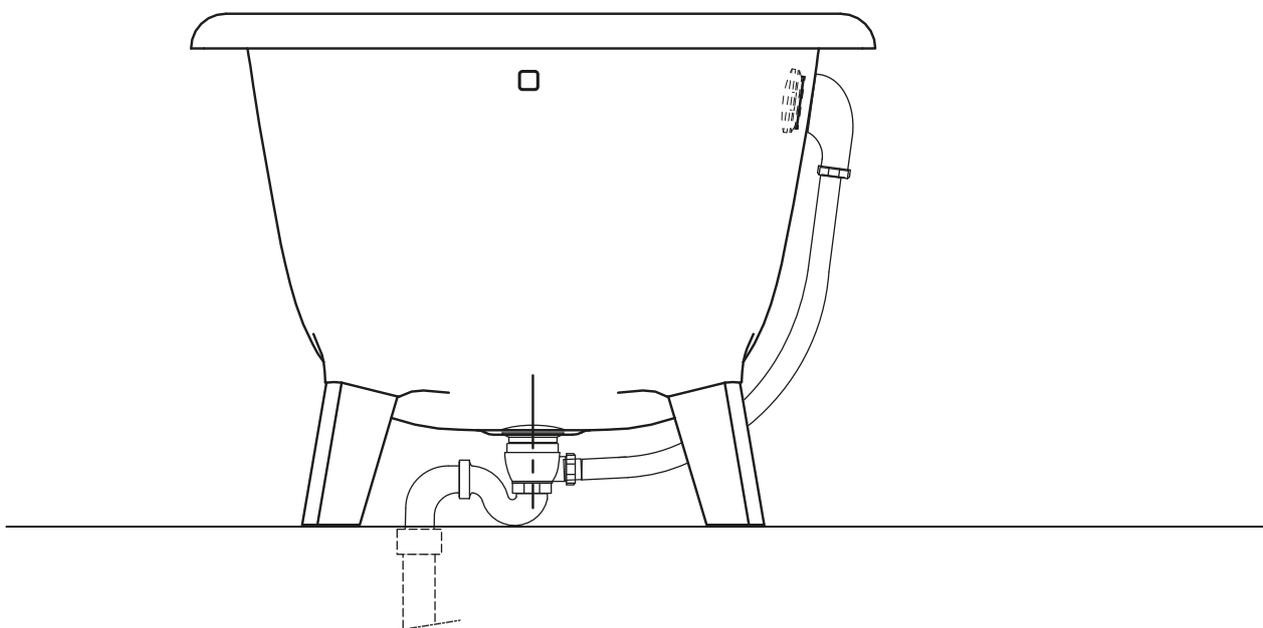


5

Applicare il silicone sotto i piedi  
Apply silicone to the underfoot

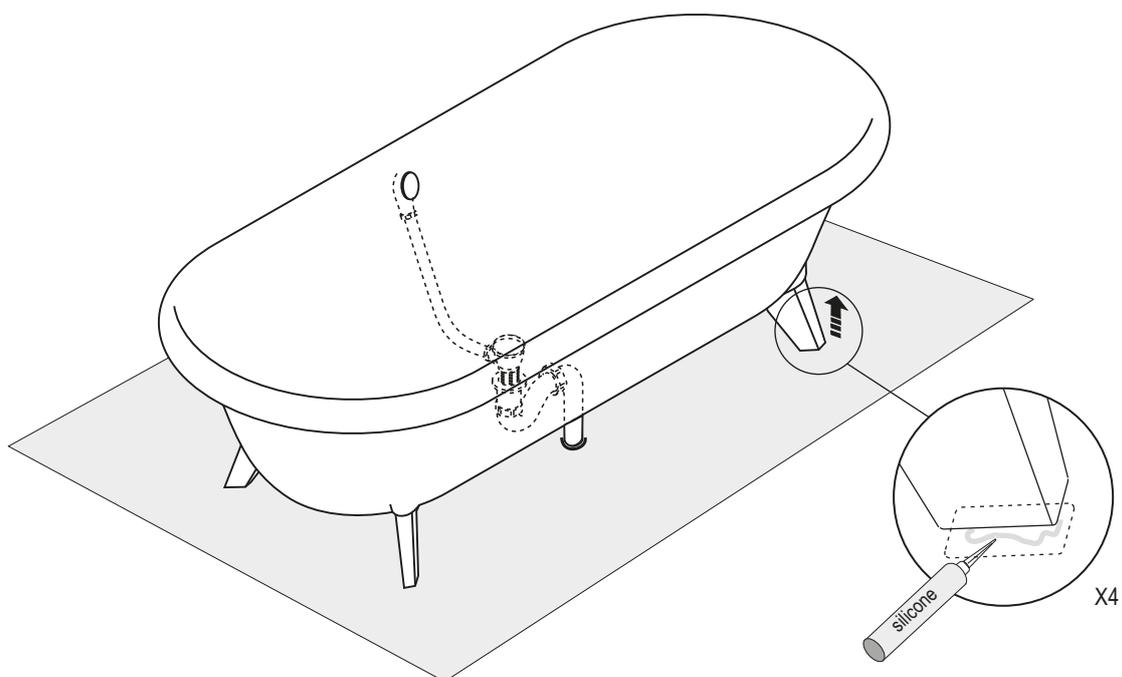

6

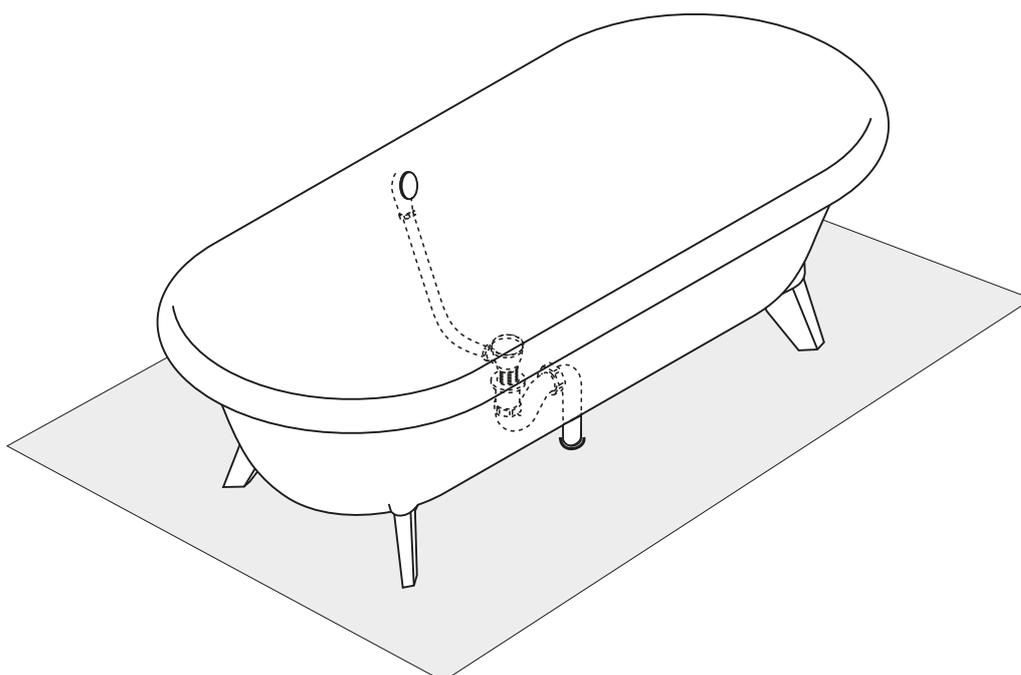

STOP 24 h.

