	Vasca/ Bathtub
	DROP
	AVAS1097Z
	<p>Vasca in Cristalplant®</p> <p>Bathub made in Cristalplant®</p>

MANUTENZIONE

Leggere attentamente le istruzioni di manutenzione del Cristalplant® allegate alla vasca.
Per la normale pulizia si consiglia di utilizzare detersivi di uso comune.
Si sconsiglia l'utilizzo di detersivi abrasivi, acidi e anticalcare.

Nota

La vasca deve essere installata su un pavimento perfettamente in piano e non può essere incassata.
Predisporre l'impianto di scarico a pavimento con tubo terminale diametro 40 mm con guarnizione di tenuta.

Le vasche devono essere posate su pavimentazione rigide. Sono a cura dell'installatore la movimentazione in sicurezza, le verifiche strutturali, la portata dei solai e la costruzione del rivestimento.

MAINTENANCE

Carefully read the Cristalplant® maintenance instructions attached to the Bathtub
For normal cleaning use common detergents.
Do not use either abrasive detergents or solvents, acids and anti limestone.

Note

The bathtub must be positioned on a flat floor surface and cannot be built-in.
Prepare the sewage mains in the floor, ending with a 40 mm diameter pipe with a sealed gasket.

The bathhub must be set up on hard flooring.
Handling in safety, structural tests and tests of the load-bearing capacity of the floor are the responsibility of the installer, also the construction of the covering.

Agape srl


via A. Pitentino, 6 46037 Governolo
Roncoferraro (MN), Italy

T +39 0376 250311 / F +39 0376 250330

e-mail: info@agapedesign.it

www.agapedesign.it

CONTENUTO DELLA CONFEZIONE
PACKAGE CONTENTS

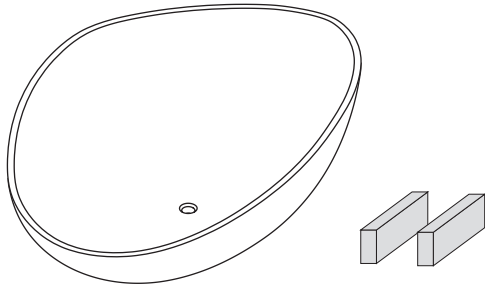


STRUMENTI
TOOLS



trasparente - antimuffa
transparent - antimould

PREDISPOSIZIONE
BATHTUB PREDISPOSITION

posizione rubinetteria a parete
position for wall mounted taps

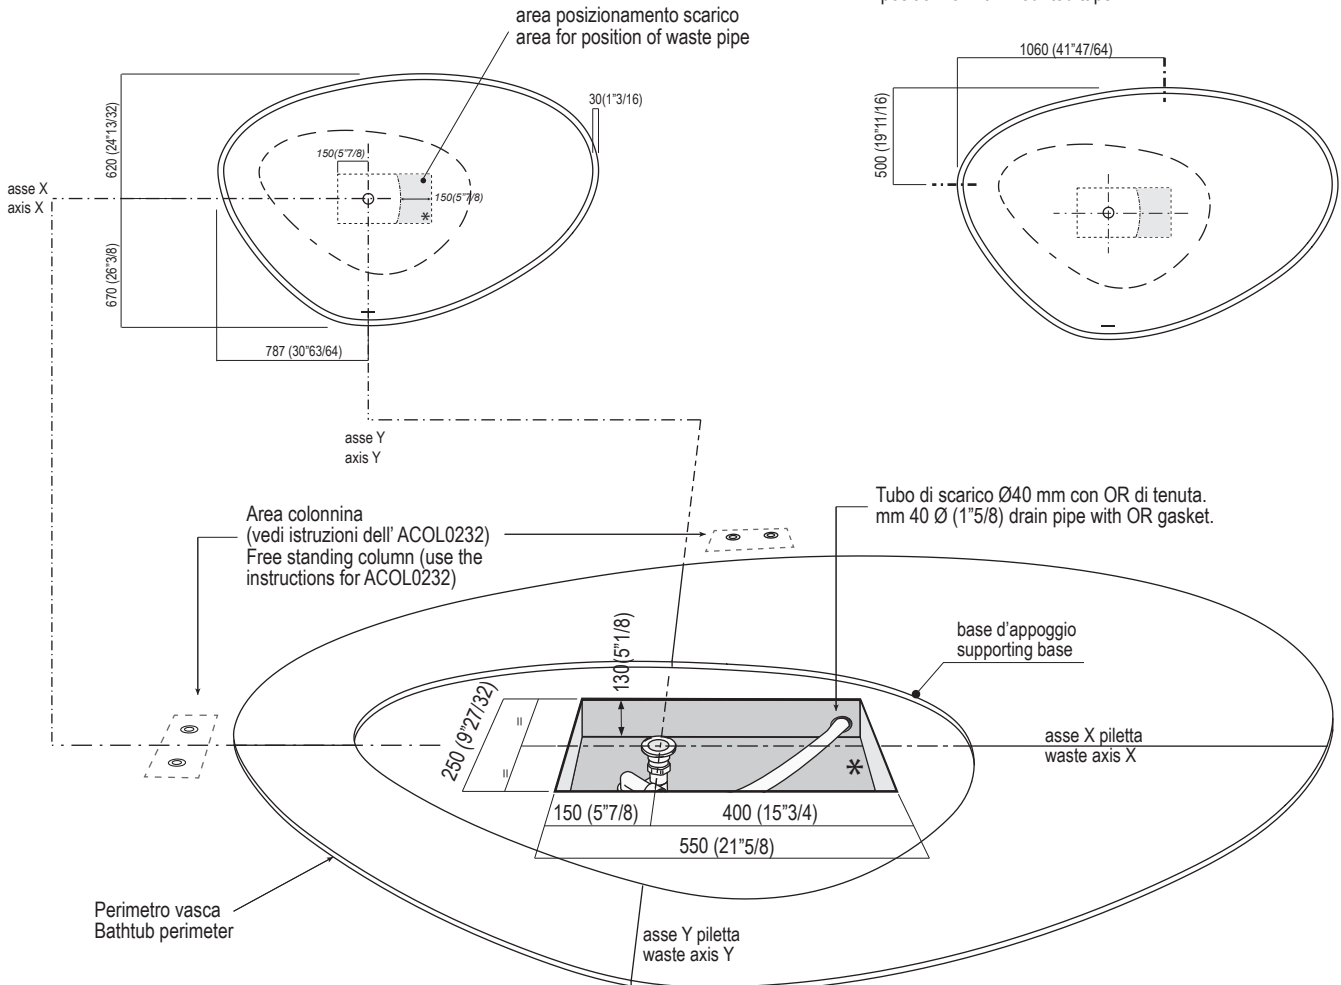

<p>1</p>	<p>Collegare il sifone, la piletta e il troppo pieno. Connect the waste trap, the waste and the overflow.</p>	<p>2</p>	<p>PARTICOLARE PILETTA / WASTE DETAIL</p>
<p>3</p>	<p>Effettuare alcune prove di tenuta dell'impianto realizzato. Togliere i distanziatori in legno avendo cura di non effettuare movimenti bruschi o spostamenti troppo ampi. Perform some leak tests of the realised plant. Remove the wooden spacers without provoking hard movements or wide shifts.</p>	<p>4</p>	<p>Procedere con il livellamento della vasca e la siliconatura perimetrale del basamento. Proceed with the levelling of the bathtub and apply silicone to the base perimeter.</p>